

Y4SD


Yamaha FZS 600 Fazer 98-03

Fitting kit left side:

Fitting kit right side:

ID	Description	Cat.	Qt
1	Dural. adapter	581	1
2	Alu. cylinder 10mm	108	1
3	Bolt M8x110	879	1
4	Bolt M10x110	844	1
5	Bolt cone M12x40	858	1
6	Threaded cylinder 60mm	237	1
7	SLD adapter	537	1
8	Bolt M12x40	857	1
9	Nut M10	810	1
10	Nut M8	809	1
11	Washer M10	804	1
12	Washer M8	802	1
13	Plastic cover	X4	1
14	Plastic cover	X5	1
15	Dural cylinder adapter	149	1
16	Bolt M8x25	815	2
17	Washer M8	800	2

ID	Description	Cat.	Qt
1	Dural. adapter	580	1
2	Alu. cylinder 10mm	108	1
3	Bolt M8x110	879	1
4	Bolt M10x110	844	1
5	Bolt cone M12x40	858	1
6	Threaded cylinder 50mm	283	1
7	SLD adapter	537	1
8	Bolt M12x40	857	1
9	Nut M10	810	1
10	Nut M8	809	1
11	Washer M10	804	1
12	Washer M8	802	1
13	Plastic cover	X4	1
14	Plastic cover	X5	1
15	Dural cylinder adapter	149	1
16	Bolt M8x25	815	2
17	Washer M8	800	2

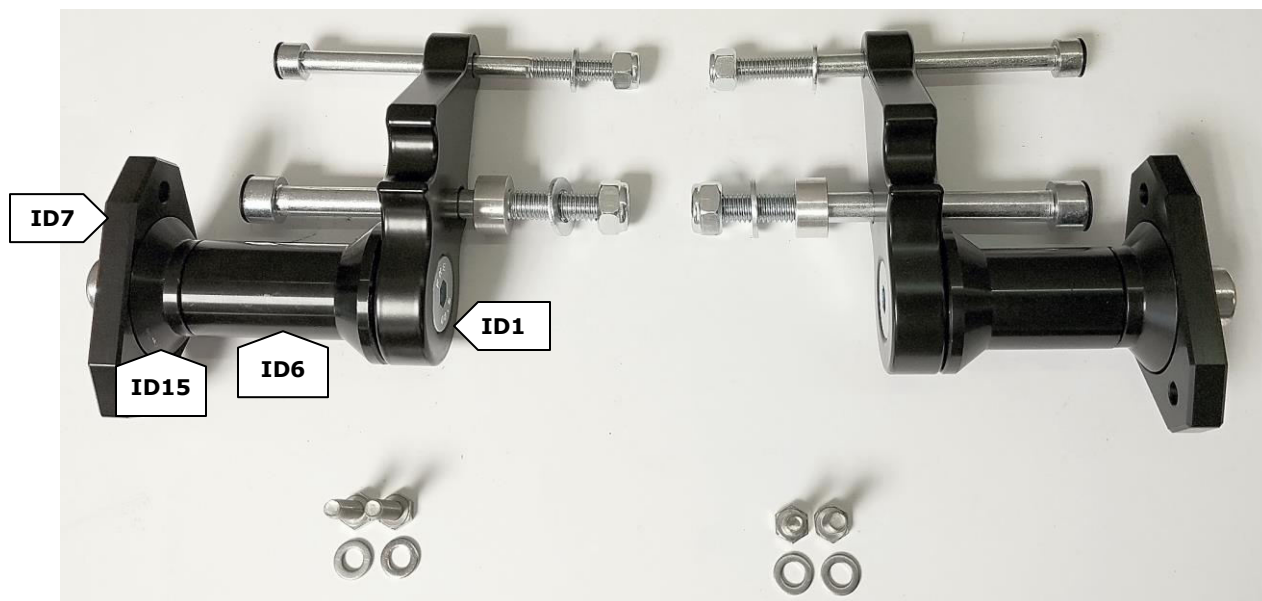

INSTRUCTIONS

- 1) Dismantle original bolts from the frame.
- 2) Fit threaded cylinder ID6 on the adapter ID1 using bolt ID5. Fit this kit on the frame of motorcycle using two bolts ID3 and ID4 with washers ID12 and ID11. Put cylinder ID2 on the bolt ID4. Tighten bolts from back side using nuts ID10 and ID9.
- 3) Put SLD adapter ID7 and cylinder adapter ID15 on the bolt ID8. Mount this kit into the threaded cylinder ID6.
- 4) Fit sliders using two bolts ID16 and washers ID17.
- 5) Cover bolts using plastic caps ID13 and ID14.

Use medium strong glue on all threads during installation.

