

# Y33

## Yamaha MT07/XSR700 2014 -

### Kit for left side:

ID.	Description	Cat.no	QTY
1	Crash protector	PH	1
2	Steel box	X2	1
3	Dural cylinder	1114	1
4	Bolt M12x110x1,25	910	1


### Kit for right side:

ID.	Description	Cat.no	QTY
1	Crash protector	PH	1
2	Steel box	X2	1
3	Dural cylinder	1114	1
4	Bolt M12x110x1,25	910	1

### Instruction to assemble:

#### (left and right side are same)

1. Dismantle original bolt from frame.
2. Insert the duralumin cylinder (ID3) into the frame.
3. Insert the steel box (ID2) into the crash protector (ID1) and mounting by bylot M12 (ID4).
4. The aluminium cover use only for PHV1 a PHV2

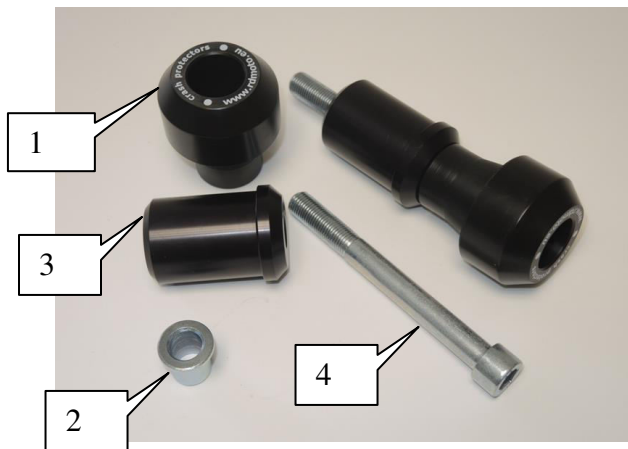

**Use the glue on threads for all connects.**

