



CF123

KTM 690 Enduro R 2019- Husqvarna 701 Enduro/Supermoto 2016-2020

Kit for Left Side

ID	Description	Cat. No.	Pcs
1	Lower Frame	CF123	1
2	Strut	X125	1
3	Washer M10-flat	804	1
4	Self-lock nut M10	810	1
5	Dural. roller d=22mm	1337	1
6	Screw M10x50mm	849	1
7	AL screw cover	X115	1
8	Plastic allen bolt cover	X4	1
9	Screw M6x20mm	1022	3
10	Washer M6 - flat	947	3
11	Washer M6 - large	987	3
12	Self-lock nut M6	948	3

Kit for Right Side

ID	Description	Cat. No.	Pcs
1	Lower Aluminium plate	X124	1
2	Screw M10x180mm	978	1
3	Washer M10-flat	804	1
4	-----	---	
5	Dural. roller d=22mm	1337	1
6	Screw M10x50mm	849	1
7	AL screw cover	X115	1
8	Plastic allen bolt cover	X4	1
9	Screw M6x20mm	1022	3
10	Washer M6 - flat	947	3
11	Washer M6 - large	987	3
12	Self-lock nut M6	948	3

Mounting Instructions:

Follow mounting procedure as shown on attached photographs.

Take off the original lower plastic casing.

Then install X125 strut into the frame, but don't tighten it yet.

Put on the lower frame in rear part into rubber housings and lean it towards the X125 strut.


Take M10x50mm screws, equip them with AL covers and mount into thread on the X125 strut. To cover the bolt heads, use plastic covers for allen bolts.

Finally, you can tighten everything.

If you encounter any issues during assembly, please do let us know.

Thank you for purchasing RDmoto products.

Note – We recommend using medium glue for threads of all screws (blue color).

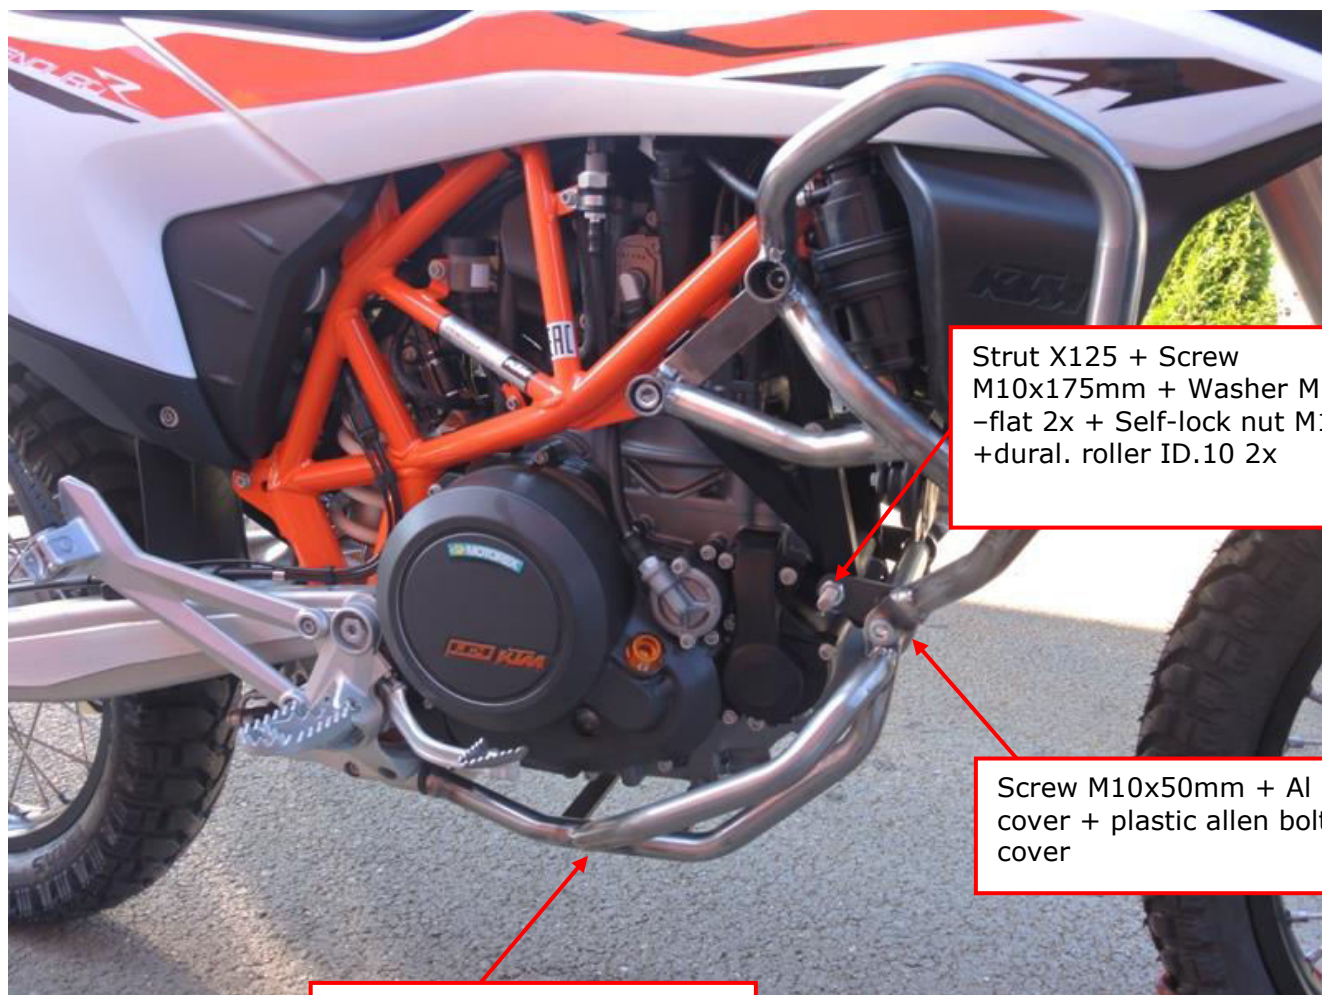

Strut X125 + Screw
M10x175mm + Washer M10
-flat 2x + Self-lock nut M10-
+dural. roller ID.10 2x

Screw M10x50mm + Al screw
cover + plastic allen bolt
cover

Screw M6x20mm 6x +
Washer M6-flat 6x + Washer
M6-large 6x + Self-lock nut
M6 6x + Al plate X124