

# A13S


**Aprilia RS4 125 2011-  
Aprilia RS 125 2017-**

## Fitting kit left side:

ID	Description	Cat.N	Qty
1	Dural.adapter	292	1
2	Bolt M10x35	847	1
3	Bolt M10x20	819	1
4	Bolt M10x110	879	1
5	Bar bracket	698	1
6	Bolt M6x25	877	3
7	Bolt M4x16	876	2

## Fitting kit right side:


ID	Description	Cat.N	Qty
1	Dural.adapter	292	1
2	Bolt M10x35	847	1
3	Nut M10	810	1
4	Washer	804	1
5	Bar bracket	699	1
6	Bolt M6x25	877	3
7	Bolt M4x16	876	2

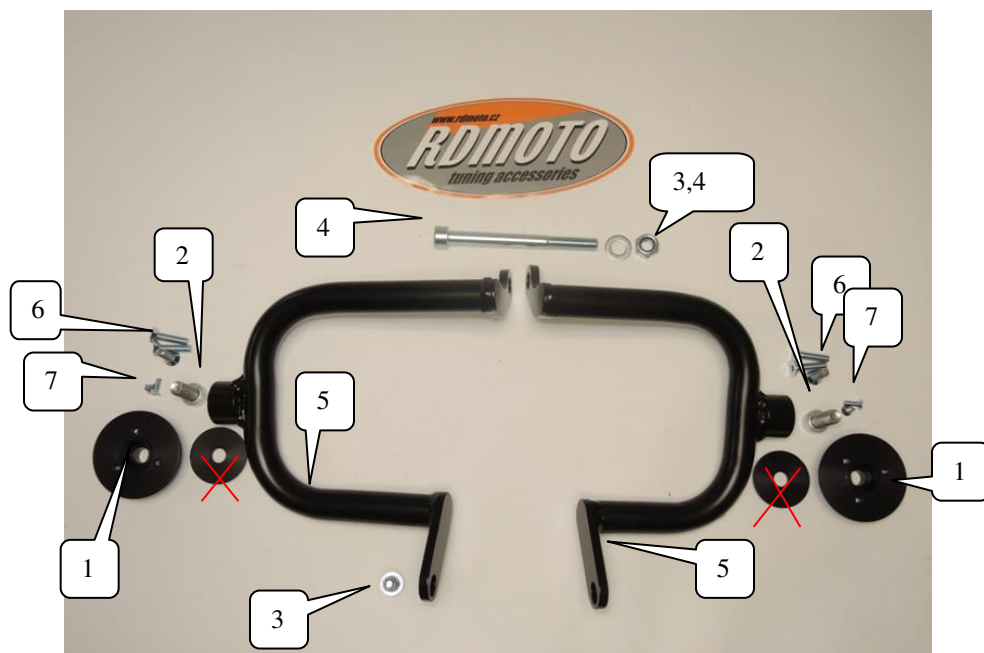

## Instruction to assembly:

1. Take off left and right fairing.
2. Dismantle original bolt M10 in front of engine.
3. Dismantle original bolt from frame on the left side (red market on picture 1).
4. Put bracket and fixed it by bolt ID.3 and insert through bolt ID.4
5. On the right side dismantle orig.bolt.
6. Put bracket for tighten use original bolt and nut wit washer ID.3 and ID.4
7. Put fairing back on the bike.
8. Take bolts ID.2 and make assembly dural.adapters ID.1. For gripping sliders use bolts ID.6. Insert covers, use bolts ID.7

**Warning: We recommend use the glue of all threads. Medium strong.**

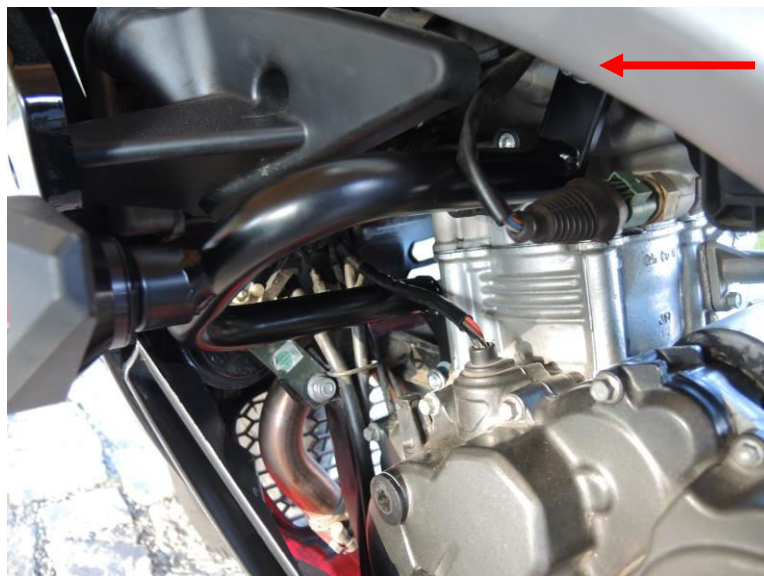

(picture1)

