

B7SD


BMW S 1000R 2014-

Fitting kit left side:

ID	Description	Cat.N	pcs
1	Steel Adapter	692	1
2	Dural. cylinder d=6,5	1105	1
3	Bolt M10x60	850	1
4	Washer M10	804	1
5	Polyamid cylinder 20mm	X6	1
6	Bolt M8x25	831	1
7	Poly.spacer d=6mm	X64	1
8	Bolt M6x16	962	1
9	Washer M6	947	1
10	Bolt M10x80	852	1
11	Dural cylinder – 50mm	13	1
12	Washer stringed	801	1
13	3M Tape	3M	2
14	Washer M8	802	2
15	Bolt M8x25	815	2
16	Diamond adapter	537	1

Fitting kit right side:

ID	Description	Cat.N	pcs
1	Steel adapter	693	1
2	Dural. cylinder d=7	1107	1
3	Bolt M10x60	850	1
4	Washer M10	804	1
5	Polyamid.cylinder 20mm	X6	1
6	Bolt M8x25	831	1
7	Poly.spacer d=6mm	X64	1
8	Bolt M6x16	962	1
9	Washer M6	947	1
10	Bolt M10x55	1002	1
11	Dural. cylinder – 20mm	DV10	1
12	Washer stringed	801	1
13	3M Tape	3M	2
14	Washer M8	802	2
15	Bolt M8x25	815	2
16	Diamond adapter	537	1

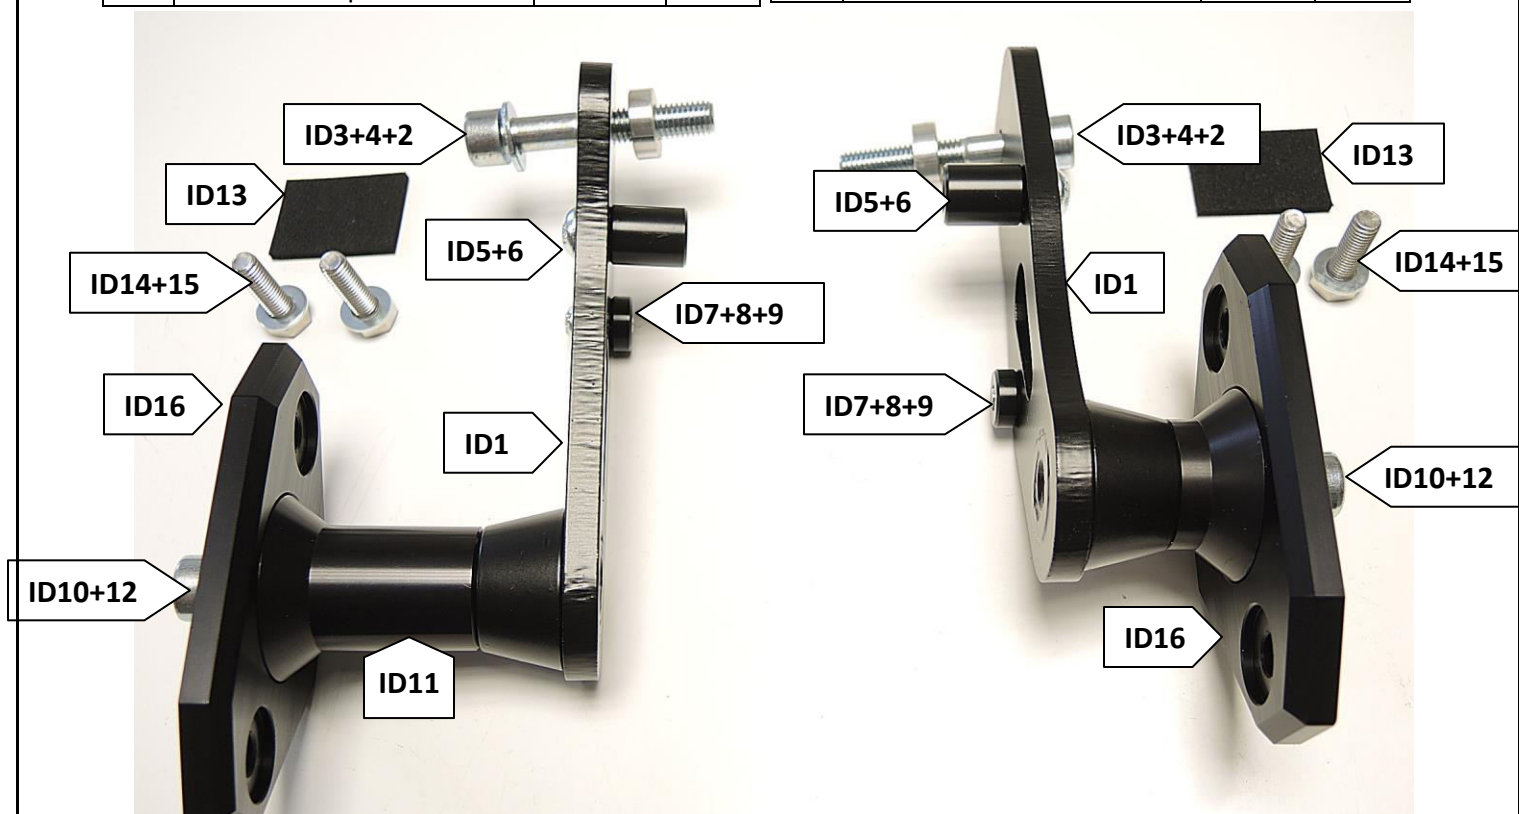





Instructions:

- 1.) **We recommend to use the glue on all threads (blue color – medium strong).**
- 2.) Remove fairing of motorcycle.
- 3.) Fit poly cylinder ID7 on the steel adapter ID1 using bolt ID8 and washer ID9.
- 4.) Fit poly cylinder ID5 on the back side of steel adapter ID1 using bolt ID6.
- 5.) Remove original bolt from frame of motorcycle.
- 6.) Stick 3M tape ID13 on the frame.
- 7.) Insert dural cylinder ID2* into the frame of motorcycle.
- 8.) Fit prepared steel adapter on the frame of motorcycle using bolt ID3 and washer ID4.
- 9.) Put fairing back on motorcycle.
- 10.) Prepare bolt ID10*.
 - a. Put washer ID12 on bolt.
 - b. Put diamond adapter ID16 on bolt.
 - c. Put dural cylinder ID11* on bolt.
- 11.) Now you can mount this kit into steel adapter.
- 12.) In the end fit protector using two bolts ID15 and washers ID14.

*(ID2 – longer cylinder is on the right side, ID10 – longer bolt is on the left side, ID11 – longer cylinder is on the left side)