

D8S


Ducati Monster 821/1200 '14

Left side kit:

ID	Description	Cat.no	Pcs
1	Frame	520	1
2	Cylinder 80,5mm (front)	1177	1
3	Cylinder 75 mm (rear)	1178	1
4	Bolt M12x150x1,25 (front)	984	1
5	Bolt M12x140x1,25 (rear)	995	1
6	Washer M12	803	1
7	Bolt M10x30	882	1
8	Dural. adapter for SLD	292	1
9	Bolt M6x25	877	3
10	Bolt M4x16	876	2
11	Plastic cover M12	X60	2
12			

Right side kit:

ID	Description	Cat.no.	Pcs
1	Frame	531	1
2	Cylinder 47,5mm přední	1179	1
3	Cylinder 82 mm zadní	1180	1
4	Bolt M12x120x1,25 přední	913	1
5	Bolt M12x140x1,25 zadní	995	1
6	Washer M12	803	1
7	Bolt M10x30	882	1
8	Dural. adapter for SLD	292	1
9	Bolt M6x25	877	3
10	Bolt M4x16	876	2
11	Plastic cover M12	X60	2
12			

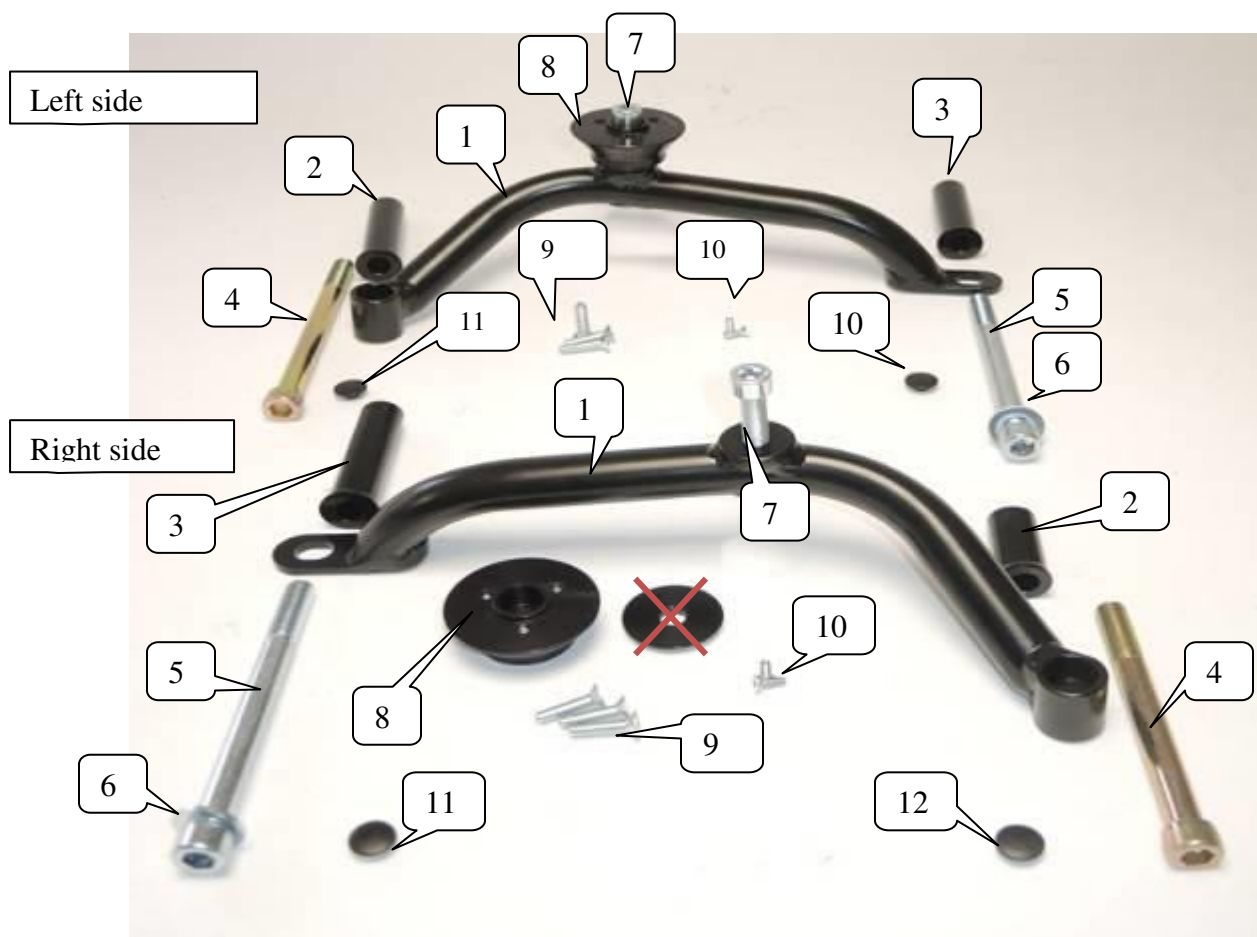





RDMOTO CZECH REPUBLIC
info@rdmoto.cz
www.rdmoto.cz

- Remove original bolts from the frame of motorcycle.
- Insert dural cylinders (ID2 + ID3) into the frame of motorcycle.
- Mount frame ID1 on the frame of motorcycle using bolts ID4 and ID5+ID6.
- Place plastic covers on bolts.
- Put dural adapter ID8 on the bolt ID7. Mount this kit on the frame.
- Fit slider using bolts ID9.
- Fit cover using bolts ID10.

We recommend to use the glue on all threads (medium strong).