

# K24

## Kawasaki ER-6F 2009-2011



### Fitting kit left side:

ID	Description	Cat.N	Qty
1	Steel box	X1	1
2	Bolt M10x80	852	1
3	Dural.cylinder d=40	4	1
4	Bolt M8x80	843	2
5	Washer M8 (spring)	800	2
6	Dural.cylinder d=56	222	1
7	Dural.cylinder	220	1
8	Bolt M6x60	872	1
9	Nut M6	948	1
10	Washer M6	947	2
11	3M Tape	-	1
12	Steel adapter	532	1

### Fitting kit right side:

ID	Description	Cat.N	Qty
1	Steel box	X1	1
2	Bolt M10x90	880	1
3	Dural.cylinder d=50	5	1
4	Bolt M8x70	841	2
5	Washer M8(spring)	800	2
6	Dural.cylinder d=36,2	221	2
7	Bolt M6x50	867	1
8	Nut M6	948	1
9	Washer M6	947	2
10	3M Tape	-	1
11	Steel adapter	533	1

13	Connecting bar	X42	1
14	Washer M8	800	2
15	Bolt M8x20	824	2

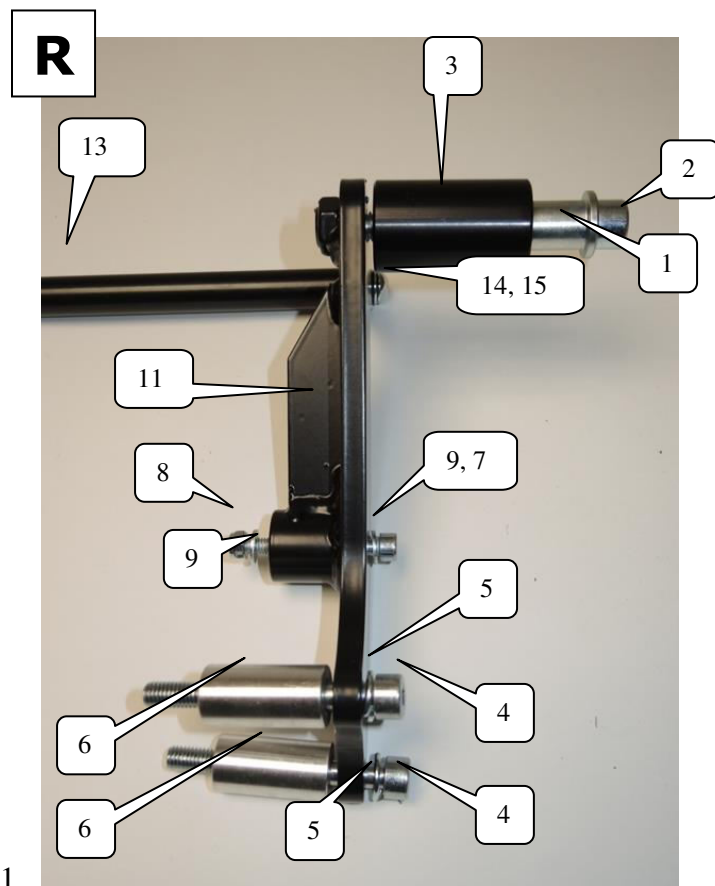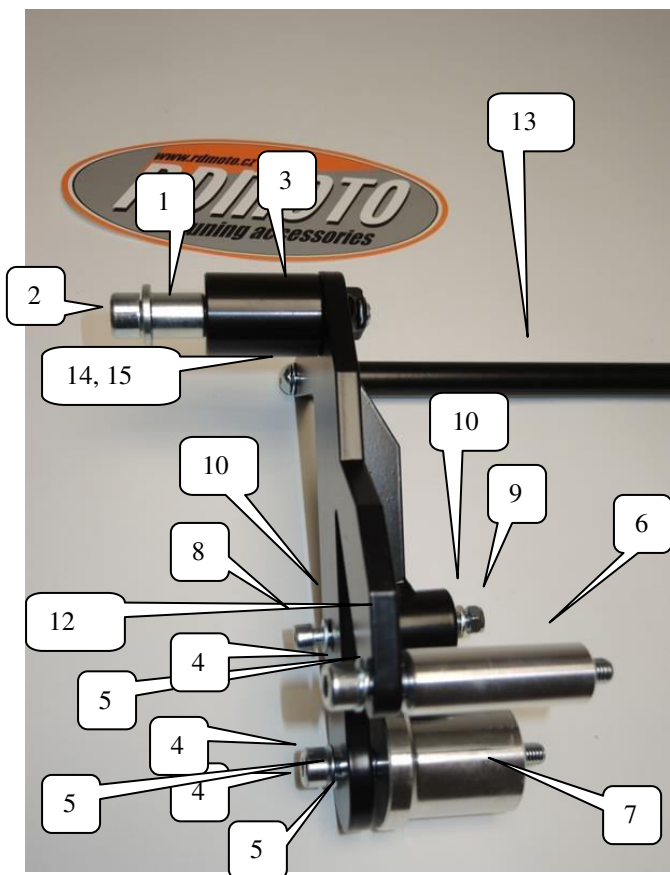





**Instruction to assembly left side:**

1. Take out fairing from bike.
2. Remove the orig. bolts from frame.
3. Take steel adapter ID.12 insert bolts ID.4 and washers ID.5.
4. Under front bolt M8 slip over dural.cylinder ID.7 and under the rear bolt M8 slip over dural.cylinder ID.6.
5. Where is a steel adapter touch with frame or fairing sticking 3M tape.
6. This set mounting on the bike.
7. Bolt ID.8, washers M6 ID.10 and nut ID.9 use for connect the steel adapter and motorcycle.
8. In front of engine inserted through connecting bar ID.13 and mounting it on steel adapter. Use bolt ID.14 and washer ID.15.

**Instruction to assembly right side:**

1. Take out fairing from bike.
2. Remove the orig. bolts from frame.
3. Take steel adapter ID.11 insert bolts ID.4 and washers ID.5.
4. On the bolts slip over dural.cylinders ID.6.
5. This set to mount on the bike.
6. Take bolt ID.14 and washer ID.14 to mount bar ID.13.
7. To mount bolt M6 ID.7, washers ID.9 and nut ID.8.
8. Tighten all bolts on the right and left side.

Put fairing back the bike.

**Assembly instruction for protectors."**

1. **Left side:** insert steel box ID.1 and bolt ID.2 into the protector.
2. From back side insert dural.cylinder ID.3.
3. This set mount on adapter.
4. **Right side:** insert steel box ID.1 and bolt ID.2 into the protector.
5. From back side insert dural.cylinder ID.3.
6. This set mount on adapter.

During installation, follow the attached photos.

---

**Warning: We recommend use the glue of all threads. Medium strong.**