

# A6


## Aprilia RSV-4

### Fitting kit left side:

ID	Description	Cat.N	QTY
1	Steel box M10	X1	1
2	Bolt M10x75mm	1007	2
3	Bolt M10x55mm	1002	1
4	Dural.cylinder d=20mm	2	1
5	Dural.cylinder d=20,7mm	459	2
6	Duralumin adapter	501	1
7	Plastic cover M10	X4	2

### Fitting kit right side:

ID	Description	Cat.N	QTY
1	Steel box M10	X1	1
2	Bolt M10x90mm	880	2
3	Bolt M10x55mm	1002	1
4	Dural.cylinder d=20mm	2	1
5	Dural.cylinder d=20,7mm	459	2
6	Duralumin adapter	500	1
7	Plastic cover M10	X4	2

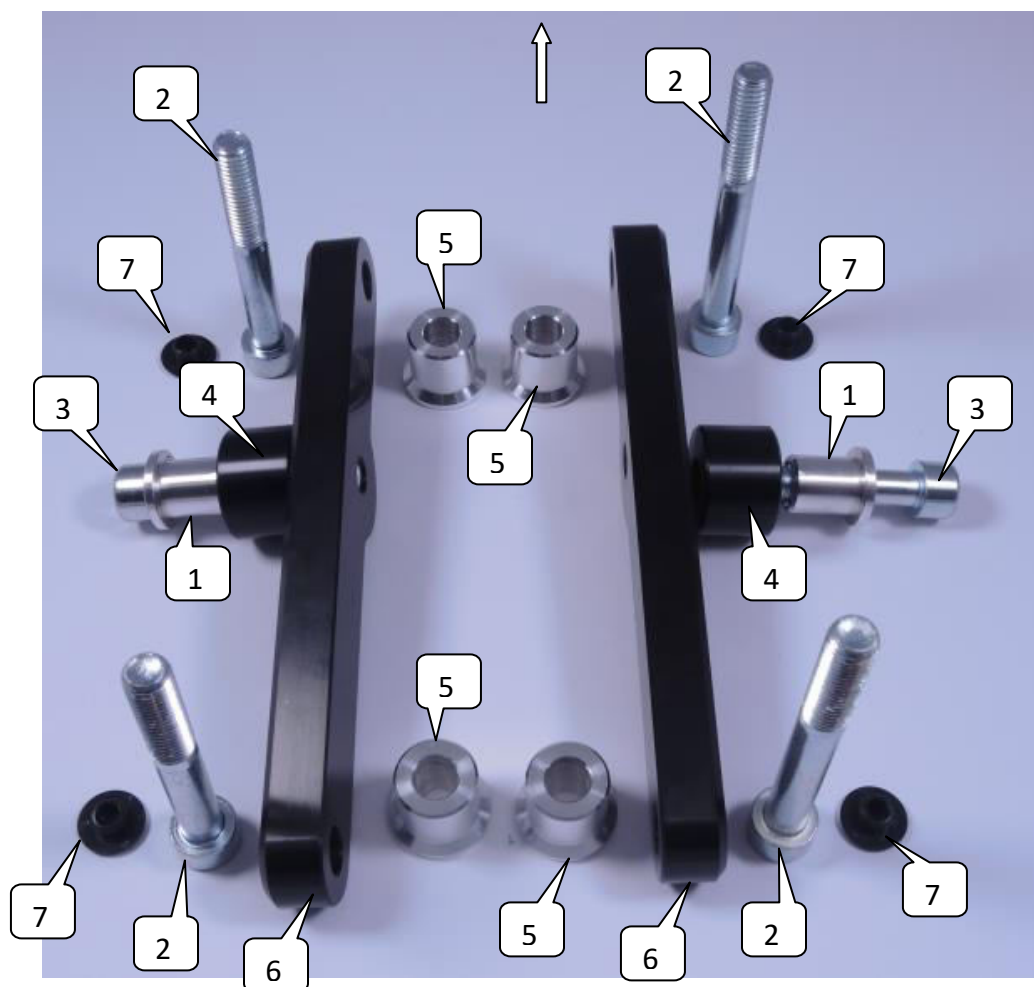

### **Left side mounting:**

1. Remove the original side plastic and M10 bolts from the motorcycle frame.
2. Mount the aluminum adapter (ID.6) on the motorcycle frame (mounting location as shown in the illustration below).
3. Insert the duralumin rollers (ID.5) under the duralumin adapter and remove the screws (ID.2). Put plastic caps on the screw heads (ID.7)
4. Thread the aluminum insert (ID.1) onto the screw (ID.3). Insert a duralumin roller (ID.4) under the protector and screw (ID.3).

### **Mounting right side:**

Installation of the right side is identical to the left side.

1. Remove the original side plastic and M10 bolts from the motorcycle frame.
2. Mount the aluminum adapter (ID.6) on the motorcycle frame (mounting location as shown in the illustration below).
3. Insert the duralumin rollers (ID.5) under the duralumin adapter and remove the screws (ID.2). Put plastic caps on the screw heads (ID.7)
4. Thread the aluminum insert (ID.1) onto the screw (ID.3). Insert a duralumin roller (ID.4) under the protector and screw (ID.3).

**Note: When mounting, we recommend using thread glue (blue colors).**

