

T9SDM

Triumph Tiger 800 2011-

Fitting kit left side:

ID	Description	Cat.N	Qty
1	Duralumin adapter	595	1
2	Bolt M10x145x1,25mm	909	1
3	Bolt M10x70x1,25mm	898	1
4	Dural. spacer d=83mm	278	1
5	Dural. spacer d=34mm	279	1
6	Plastic cover - black	X4	2
7	Dural.spacer for SLD	12	1
8	Dural.holder for SLDM	537/B	1
9	Bolt M10x60	860	1
10	Bolt M6x20	1024	2
11	Washer M6	1023	2

Fitting kit right side:

ID	Description	Cat.N	Qty
1	Duralumin adapter	596	1
2	Bolt M10x100x1,25mm	892	1
3	Bolt M10x70x1,25mm	898	1
4	Dural. spacer d=26mm	280	1
5	Dural. spacer d=33mm	281	1
6	Plastic cover - black	X4	2
7	Dural.spacer for SLD	12	1
8	Dural.holder for SLDM	537/B	1
9	Bolt M10x85	981	1
10	Bolt M6x20	1024	2
11	Washer M6	1023	2
12	3M tape	-	-

Installation – the left side:

1. Take out original bolts from fram as shown on the picture. Dural.adapter ID.1 Mount by bolts ID.2 and ID.3, under the adapter put dural. spacers ID.4 and ID.5.
2. This set mounting on the frame, left hand side.
3. Plastic covers ID.6 place into the bolts head.
4. Dural. spacer ID.7 and bracket ID.8 mounting on the adapter by bolt ID.9.
5. Place slider and for mounting use bolts and washers ID. 10 and ID.11.

Installation – the right side:

1. Take out original bolts from fram as shown on the picture. Dural.adapter ID.1 Mount by bolts ID.2 and ID.3, under the adapter put dural. spacers ID.4 and ID.5. Stick 3M Tape, where is adapter touching with OEM fairing.
2. This set mounting on the frame, right hand side.
3. Plastic covers ID.6 place into the bolts head.
4. Dural. spacer ID.7 and bracket ID.8 mounting on the adapter by bolt ID.9.
5. Place slider and for mounting use bolts and washers ID. 10 and ID.11.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

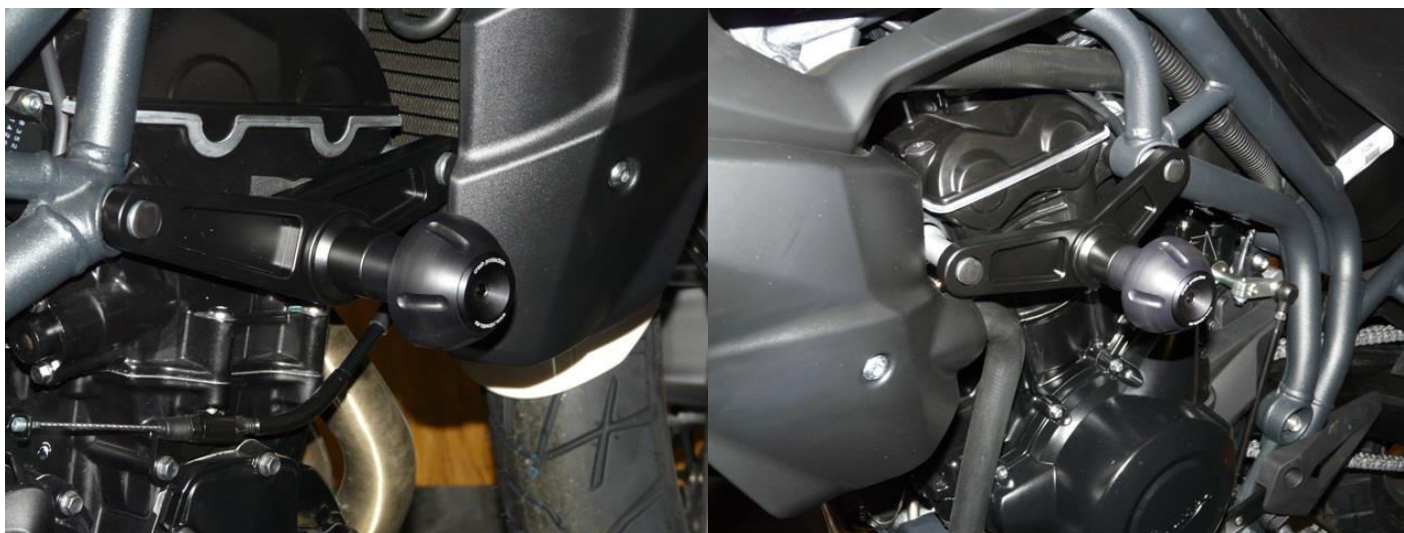
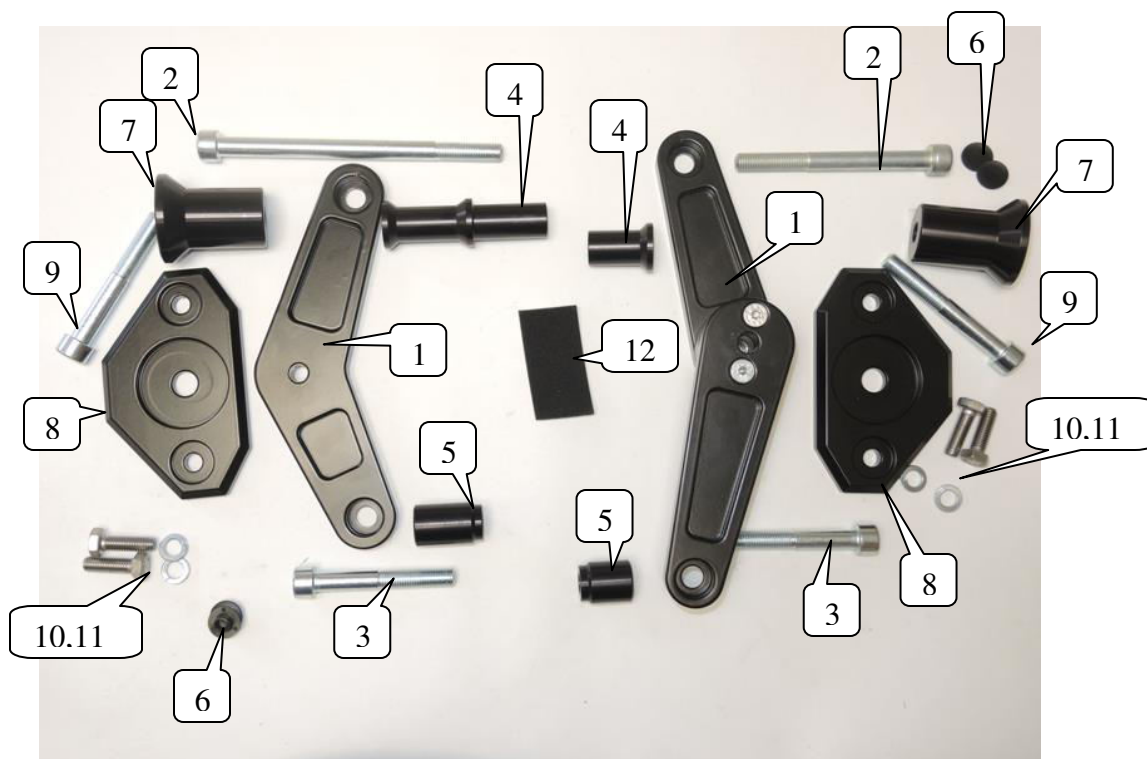


Illustration photo, place for
assembly kit.