

# Y12SD

## Yamaha R1 2009-2011

### Kit for the left side

Note	Description	Cat.No	Quant.
1	Slider RDMoto	SLD	1
2	Holder for SLD	537	1
3	Dural cylinder d=70mm	15	1
4	Bolt M10x85mm	981	1
5	Bolt M8	815	2
6	Washer M8	802	2
7	Dural. cylinder d=32,3mm	225	1
8	Steel adapter	585	1
9	3M stickers		1


### Kit for the right side

Note	Description	Cat. No	Quant
1	Slider RDMoto	SLD	1
2	Holder for SLD	537	1
3	Dural. cylinder d=40mm	12	1
4	Bolt M10x55mm	1002	1
5	Bolt M12x60x1,25mm	916	1
6	Steel adapter	584	1
7	Bolt M8	815	2
8	Washer M12	803	1
9	3M sticker		1
10	Washer M8 spring	802	2

### Installation – the left side:

1. remove the original bolt
2. use the original bolt for fitting steel adapter (note 8) Check the correct form of the adapter by photo for this side. Use tape 3M to avoid direct contact of adapter with the frame of the motorcycle.
3. insert into the frame duralumin cylinder d=32,3mm (note 7) stick 3M tape on between the frame and bolt
4. by bolt (no.4) fixed duralumin adapter (no. 3) and SLD holder (no. 2)
5. used bolt M8 (no.5) and washer (no. 6) mounting slider SLD


**Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).**

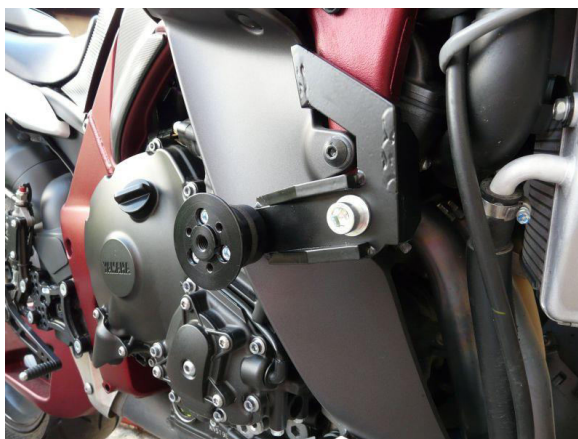

(illustrated foto, mounting kit SL01)

**Mounting instruction- right side :**

1. remove original bolt
2. used bolt (note 5) and washer (note 8) mounting adapter (note 6 – check the correct steel holder by photo), on the frame stick 3M stickers
3. used bolt (note 4) mounting duralumin cylinder (no 3) and SLD holder (note 2)
4. used bolt (note 7) and washer M8 (note 10) for mounting SLD

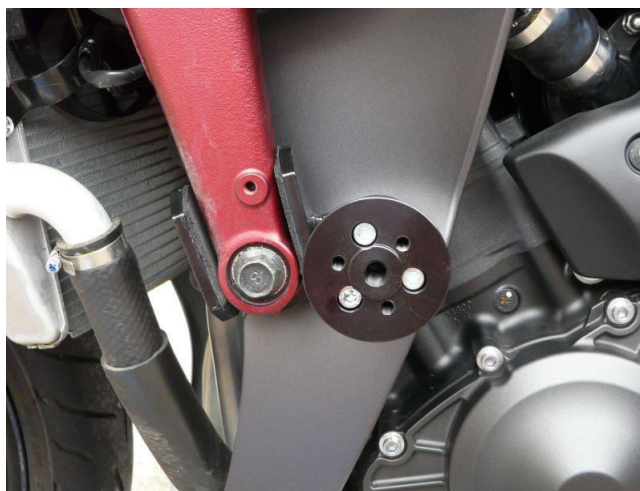

(ilustrated foto, mounting kit SL01)

**Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).**

