

KTM1


KTM990 Super Duke /R 2005-

Fitting kit left side:

ID	Description	Cat.n	Qt
1	Steel sleeve M10	X1	1
2	Bolt M10x90mm	880	1
3	Dural. cylinder d=9mm	87	2
4	Dural. cylinder d=50mm	13	1
5	Bolt M10x45mm	848	2
6	Duralumin adapter	557	1
7	Tape 3M		1

Fitting kit right side:

ID	Description	Cat.n	Qt
1	Steel sleeve M10	X1	1
2	Bolt M10x90mm	880	1
3	Dural. cylinder d=9mm	87	2
4	Dural. cylinder d=50mm	13	1
5	Bolt M10x45mm	848	2
6	Duralumin adapter	557	1
7	Tape 3M		1

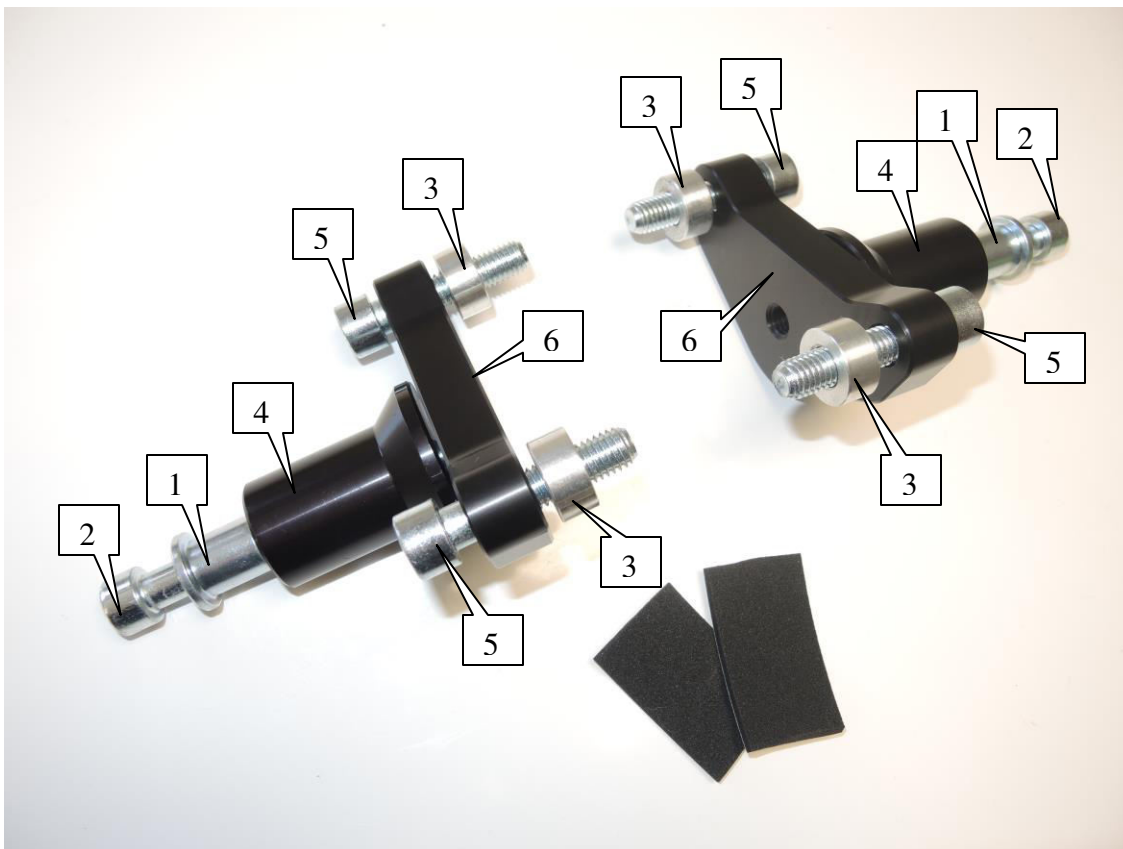



Assembly left side:

1. remove the original bolts M10
2. the mounting of adapter on the motorcycle is not difficult. At first give bolts (No. 5) in adapter. On reverse side of adapter give on bolst M10 the duralumin cylinder (No. 3). Mount all carefully on the motorcycle, use 3M tape for the touch space the frame of motorcycle.
3. put steel box (No. 1) together with bolt (No. 2) in protector and on reverse side of protector give duralumin cylinder (No. 4) on bolt.
4. all this set mount to thread on adapter

Assembly right side:

1. remove the original bolts M10
2. the mounting of adapter on the motorcycle is not difficult. At first give bolts (No. 5) in adapter. On reverse side of adapter give on bolst M10 the duralumin cylinder (No. 3). Mount all carefully on the motorcycle, use 3M tape for the touch space the frame of motorcycle.
3. put steel box (No. 1) together with bolt (No. 2) in protector and on reverse side of protector give duralumin cylinder (No. 4) on bolt.
4. all this set mount to thread on adapter

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).