

# B18

## BMW S1000RR 2019-

### Kit for Left Side

ID	Description	Cat.No.	Pcs
1	AL Insertion M10	X1	1
2	Screw M10x50mm	849	1
3	Dural. sleeve d=10mm	1	1
4	Safety nut M10	810	1
5	Dural. sleeve d=24mm	1332	2
6	Steel adapter	757	1
7	Screw M10x80mm	853	2
8	3M Tape		2


### Kit for Right Side

ID	Description	Cat.No.	Pcs.
1	AL Insertion M10	X1	1
2	Screw M10x95mm	822	1
3	Dural. sleeve d=34mm	1333	1



## **Right Side:**

1. Unscrew the original bolt as shown on attached picture.
2. Take the protector and put in ID.1 Al insertion.
3. Now insert ID.2 screw into this protector and from other side equip the screw with ID.3 dural. sleeve of 34mm lenght.
4. Mount this assembly into motorcycle frame.
5. Tighten using recommended tightening torque described in your motorcycle's manual.

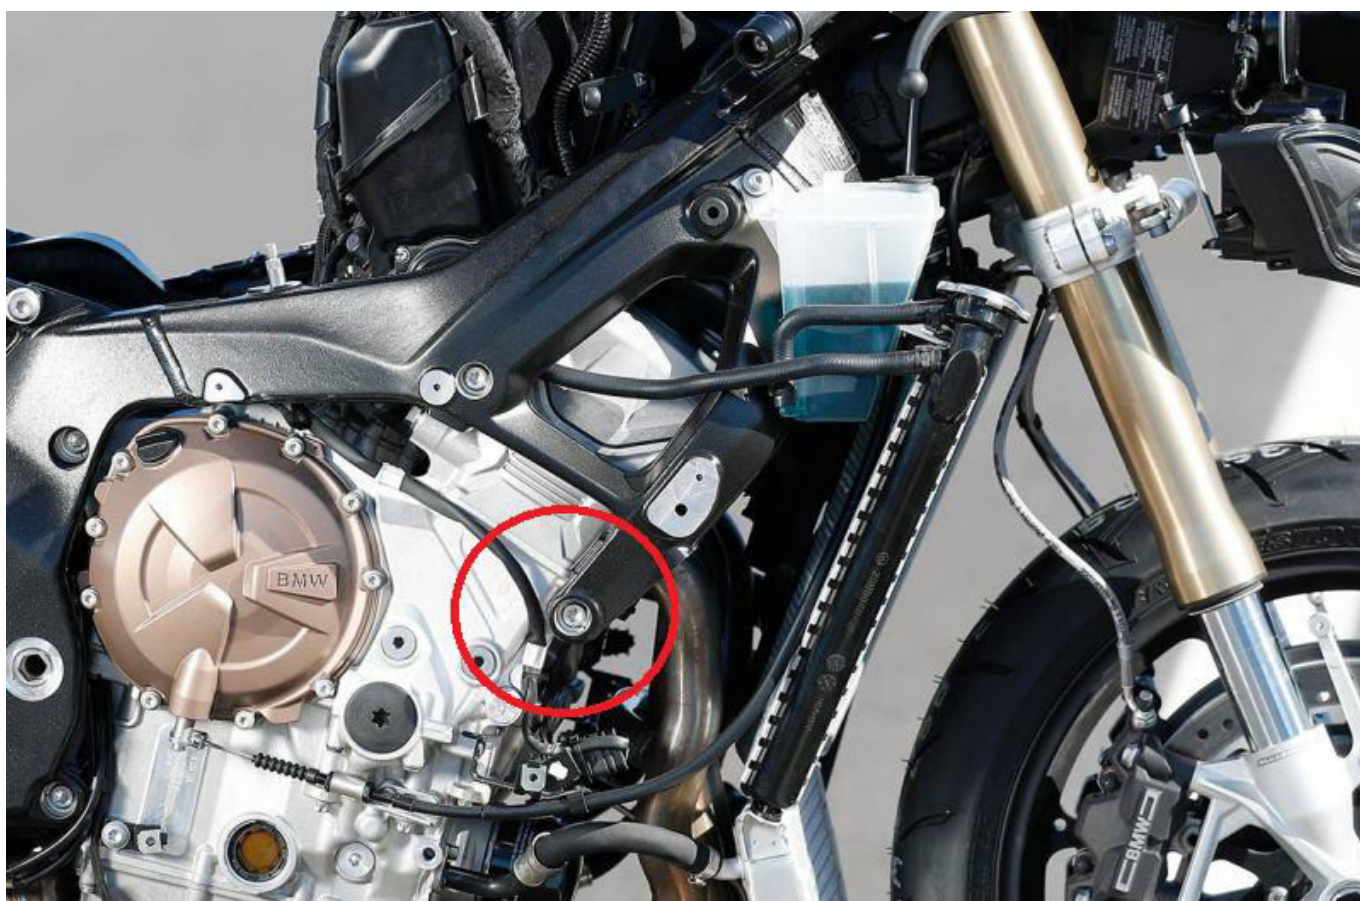



### **Left Side:**

1. Dismount the hood and original bolts as shown on pictures.
2. Take the ID.6 steel adapter and insert ID.7 screws.
3. From the rear adapter side, equip screws with ID.5 dural. sleeves.
4. Mount this assembly onto the bike. Use the included 3M ID.8 tape when you feel its needed.
5. Mount the hood back.
6. Take the protector and put in the ID.1 Al insertion along with ID.2 screw.
7. From rear side of the protector, put on ID.3 dural. sleeve.
8. Mount this assembly onto the steel adapter.
9. From rear side of the adapter, use ID.4 nut to secure the assembly.

**Note – For threads of all screws we recommend using medium strenght thread glue (blue color).**

