

A10SDM


Aprilia V4 Tuono 2011-

Kit for left side :

ID.	Description	Cat.no.	Pc
1	Bolt M10x75mm	1007	2
2	Bolt M10x65mm	943	1
3	Dural. roller l=40mm	12	1
4	Dural. roller l=20,7mm	459	2
5	Dural. adapter	501	1
6	Plastic cover M10	X4	2
7	Bolt M6x20mm	1024	2
8	Washer M6-flat	1023	2
9	Dural. adapter for SLDM	537/B	1

Kit for right side:

ID.	Description	Cat.no.	Pc
1	Bolt M10x90mm	880	2
2	Bolt M10x65mm	943	1
3	Dural. roller l=40mm	12	1
4	Dural. roller l=20,7mm	459	2
5	Dural. adapter	500	1
6	Plastic cover M10	X4	2
7	Bolt M6x20mm	1024	2
8	Washer M6-flat	1023	2
9	Dural. adapter for SLDM	537/B	1

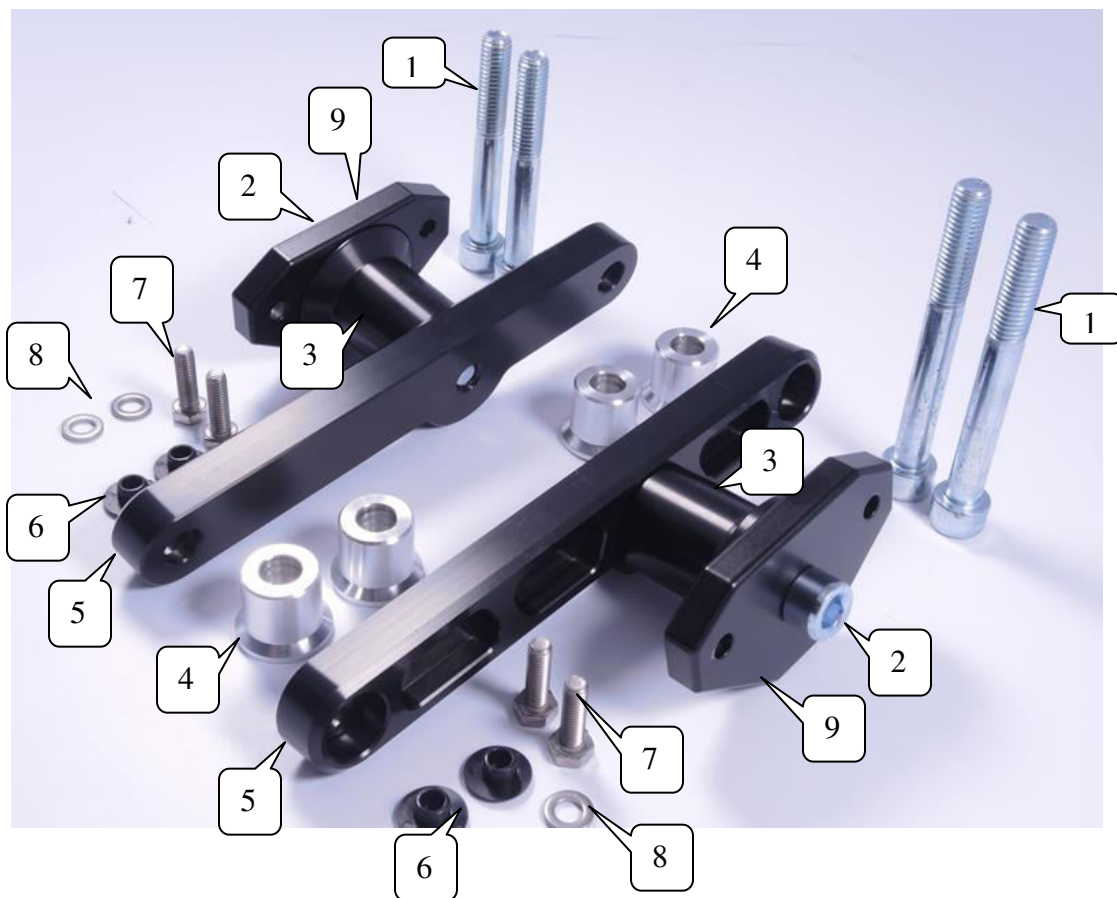

Mounting – left side :

1. Remove the original M10 bolts from the motorcycle frame.
2. Mount the duralumin adapter (ID.5) on the motorcycle frame (mounting point according to the illustration photo below).
3. Insert the duralumin roller (ID.4) under the duralumin adapter and tighten the screws (ID.1). Put plastic caps on the screw heads (ID.6)
4. Insert the screw (ID.2) through the adapter (ID.9) and duralumin. roller (ID.3), screw this set into the duralumin adapter on the motorcycle (ID.5).
5. Finally, mount the SLDM slider using M6 ID.7 screws and M6 ID.8 washers.

Mounting – right side :

The mounting of the right side is identical to the left side.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

