

Y49SDM

Yamaha MT-09 / SP

Yamaha Tracer 9 / GT

Kit for left side

ID.	Description	Cat.No.	PC
1	Dural. adapter	634	1
2	Dural. roller l=32mm	1369	1
3	Dural. roller l=31mm	1380	1
4	Bolt M10x80x1,25mm	920	1
5	Bolt M10x70x1,25mm	898	1
6	Plastic cover	X4	2
7	Adapter under slider	537/B	1
8	Dural. roller l=30mm	11	1
9	Bolt M10x60mm	850	1
10	Bolt M6x20mm	1024	2
11	Washer M6	1023	2

Kit for right side


ID.	Description	Cat.No.	PC
1	Dural. adapter	635	1
2	Dural. roller l=14mm	1370	1
3	Dural. roller l=48mm	1381	1
4	Bolt M10x75x1,25mm	938	1
5	Bolt M10x85x1,25mm	934	1
6	Plastic cover	X4	2
7	Adapter under slider	537/B	1
8	Dural. roller l=15mm	9	1
9	Bolt M10x45mm	848	1
10	Bolt M6x20mm	1024	2
11	Washer M6	1023	2

Assembly :

Installation of the two-point mounting is simple. The most important thing is to sort the lengths of the duralumin rollers and screws correctly. Install one side first and then the other side. Follow the photos below to install.

Note: We recommend using medium strenght thread glue for all bolts (blue color).

Left side :

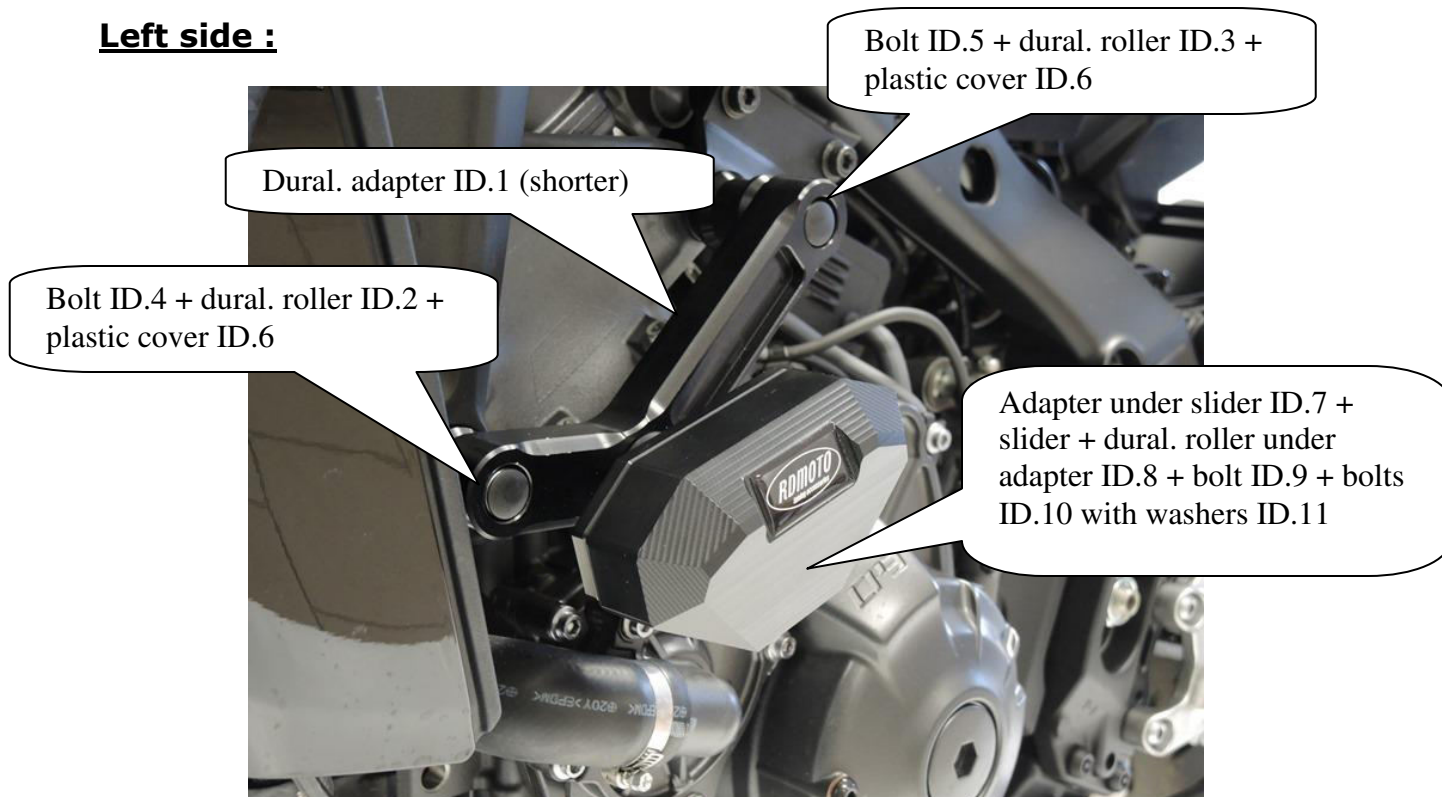

Right side :

