


# B5SDM

## BMW F800R 2009-

ID	Description	Cat.N	Qt
1	Slider holder	537/B	2
2	Alu. adapter	11	2
3	Alu. spacer	452	2
4	Bolt M10x130	885	2
5	Bolt M6x20	1024	4
6	Washer M6	1023	4

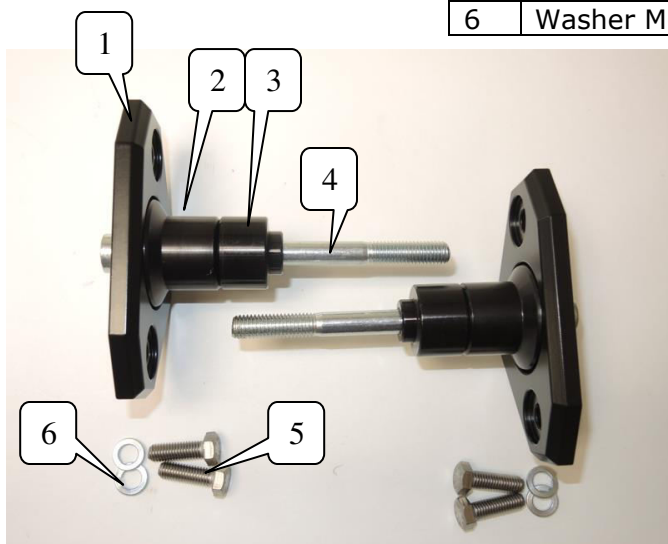

### Assembly instruction:

1. Assembly for left and right side is same.
2. Dismantle original bolts M10 from chassi.
3. Put together slider holder includ spacers and bolts ID.4. This kit assembly to the chassi.
4. Fix sliders by bolts ID.5 + washers ID.6 from back side the slider holder.

**Note: We recommend use glue of all threads during assembly. Medium strong.**

