

H40

Honda CBR500R, 2013-15

Kit for left side:

ID	Description	Cat.N	Qty
1	Steel box	X1	1
2	Dural.cylinder d=50mm	5	1
3	Bolt M10x95mm	822	1
4	Steel bracket	660	1
5	Bolts M6x35mm	989	2
6	Bolt M10x65x1,25mm	945	1
7	Washer M10	804	2
8	AL cylinder d=19,5mm	1121	1
9	Nut M10	810	1

Kit for right side:


ID	Description	Cat.N	Qty
1	Steel box	X1	1
2	Dural.cylinder d=50mm	5	1
3	Bolt M10x95mm	822	1
4	Steel bracket	661	1
5	Bolts M6x35mm	989	2
6	Bolt M10x100x1,25mm	892	1
7	Washer M10	804	2
8	AL cylinder d=32	1120	1
9	Nut M10	810	1

Instruction to assembly left side:

1. Take out fairing from moto.
2. Dismantle bolts (more on picture).
3. On the engine mount steel bracket ID.5 use bolts ID.5.
4. Insert AL cylinder ID.8 between the bracket and frame. Use bolt M10x65 and washer ID.7 a ID.6.
5. Into the protektor insert steel box ID.1
6. Use bolt M10x95 ID.3 and insert dural.cylinder d=50mm between the protektor and bracket.

Instruction to assembly right side:

1. It is same process so the left side.
2. Warning, the diameter for bolts and dural cylinder is oferent. Bolt is M10x100x1,25

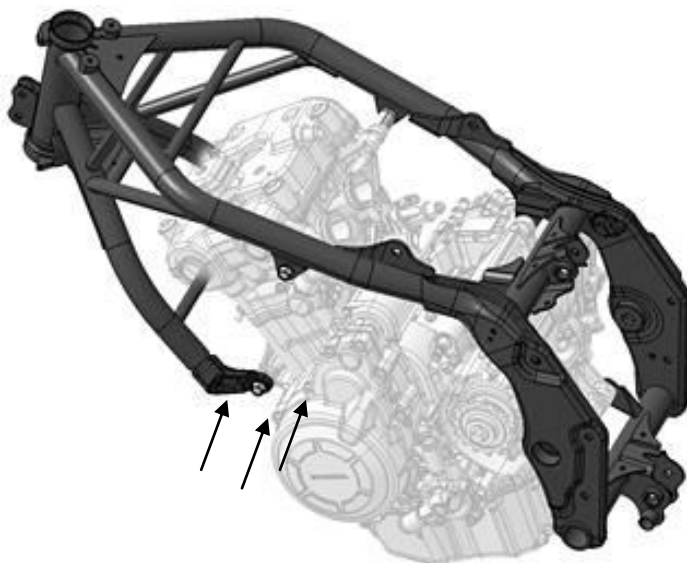

After this assembly, mount the fairing on the bike.

Warning:

Use the glue of all threads, medimum strong.

