

K6


Kawasaki ZX-10R 04-05

Kit for left side:

ID.	Description	Cat.no.	Qt
1	Steel adapter	551	1
2	Steel bush	X1	1
3	Bolt M10x60	850	1
4	Bolt M10x80x1,25	920	1
5	Alu. spacer l=20mm	DV2	1
6	Washer M10	804	1
7	Alu. spacer l= 14mm	114	1
8	3M tape		1

Kit for right side:

ID.	Description	Cat.no.	QT
1	Steel adapter	552	1
2	Steel bush	X1	1
3	Bolt M10x60	850	1
4	Bolt M10x70x1,25	898	1
5	Alu. spacer l=20mm	DV2	1
6	Washer M10	804	1
-	-----	--	--
8	3M tape		1

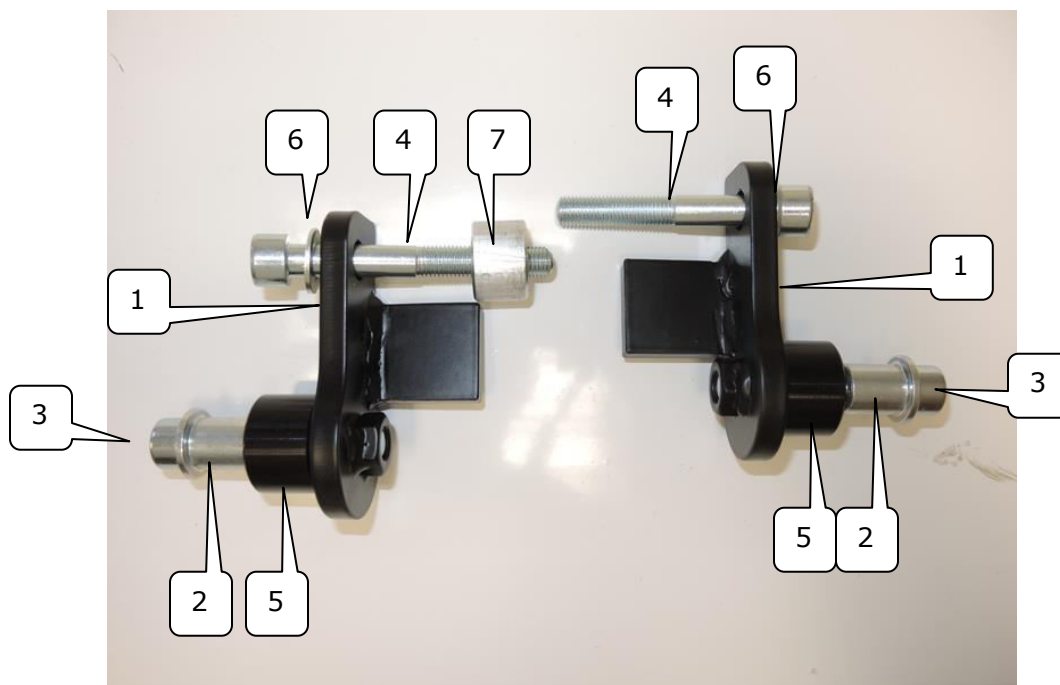

1. Installation of the left and right protector make in gripping about the attached photo above.

Assembly :

- Take off fairing from the bike.
- Dismantle original bolts from frame as shown on the pictures.
- Place spacer ID.7 under the left steel adapter ID.1. Use bolt ID.4 with washer M10. Tighten this kit on the left hand side.
- Instal steel adapter ID.1 with bolt ID.4 and washer ID.6 on the right side.
- During the assembly you can stick 3M tape on the frame.
- Now place fairing back the bike.
- Place alu. spacers ID.5 under the protectors, insert steel bushes ID.2 into the protectors and mount it on the adapters by bolts ID.3

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

