

K7SDM


Kawasaki ER-6N 2006-2008

Kit for the left side

No.	Description	Cat.no.	Pcs
1	Slider adapter	537/B	1
2	Bolt M6x20	1024	2
3	Washer M6	1023	2
4	Bolt M10x130x1,25mm	905	1
5	Bolt M8x60mm	838	1
6	Bolt M10x55mm	1002	1
7	Dural. cylinder 63mm	118	1
8	Dural. cylinder 22mm	117	1
9	Duralumin adapter	528	1
10	Pad M10 (plane)	804	1
11	Dural. cylinder	DV11	1
12	Washer M10 (spring)	801	1

Kit for the right side

No.	Description	Cat.no.	Pcs
1	Slider adapter	537/B	1
2	Bolt M6x20	1024	2
3	Washer M6	1023	2
4	Bolt M10x120x1,25mm	895	1
5	Bolt M8x40mm	835	2
6	Bolt M10x55mm	1002	1
7	Dural. cylinder 4,5mm	116	1
8	Duralumin adapter	527	1
9	Pad M10 (plane)	804	1
10	Dural. cylinder	DV11	1
11	Washer M10 (spring)	801	1

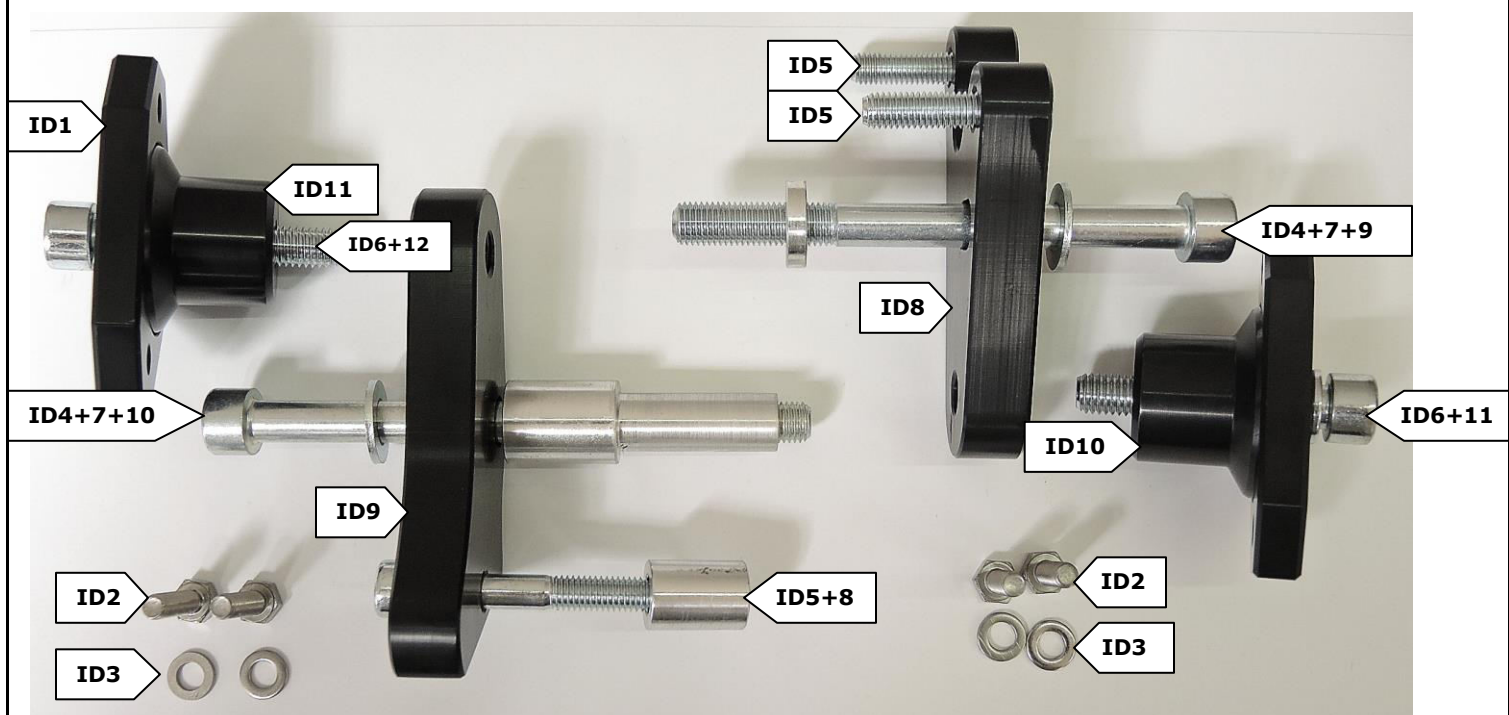

Instructions (left side):

- 1.) Dismantle side fairing.
- 2.) Fit steel adapter ID9 on the frame using two bolts (ID4+7+10 and ID5+8) according to the picture above.
- 3.) Fit slider adapter ID1 and cylinder ID11 using M10 bolt (ID6+ID12) into the steel adapter.
- 4.) In the end mount slider using two bolts (ID2) and washers (ID3).

We recommend to use the safety glue on all threads.



Instructions (right side):

- 1.) Dismantle side fairing.
- 2.) Fit steel adapter ID8 on the frame using two bolts (ID4+7+9 and two ID5) according to the picture above.
- 3.) Fit slider adapter ID1 and cylinder ID10 using M10 bolt (ID6+ID11) into the steel adapter.
- 4.) In the end mount slider using two bolts (ID2) and washers (ID3).

We recommend to use the safety glue on all threads.

